MSI

MEGA STICK 1

5 in 1 Multi-Functional Drive

User's Guide

Table of Contents

Chapter 1. Introduction **5**
How to Use This Guide 6
Unpack 7
Chapter 2. Getting Started **8**
Function Keys 8
LCD Display 9
Insert a Battery 10
Battery Consuming Reference 11
Hold Switch 11
Chapter 3. Driver & Utility Installation **12**
Connecting the Mega Stick to Your Computer 12
Hardware Installation for Windows 98SE only 13
Utility Installation 16
Using the Utility 19
Firmware Updating 19
Formatting the Mega Stick 21
Chapter 4. Basic Usage **23**
Power On and Off 23
Editing Sound Tracks (Files) 23
Music Playback 24
Normal Playback 25
Select the Next or Previous Track (File) 25
Fast-Forward or Rewind 26
Volume Adjusting 26
Delete a Track (File) 26

Delete All Tracks (Files) 27
EQ Settings 28
Repeat Settings 29
FM Radio Mode 30
Select FM Radio Mode 30
Select FM Station 31
Storing a Favorite Station 31
Selecting the Stored Favorite Station 32
Recording Radio Broadcast 32
Play a Recorded FM Voice File 33
Delete a Recorded FM Voice File 34
Delete All FM Voice Files 35
Switch between Music Playback or FM mode 35
Switch from Music Playback mode to FM mode 35
Switch from FM mode to Music Playback mode 36
Voice Recording 36
Voice Recording 36
Play a Recorded Voice File 38
Delete a Recorded Voice File 39
Delete All Voice Files 39
Language Learning Function 40
Operation Menus 41
Other Settings 44
Backlight 44
Contrast 46
Power Off 47
Record Rate 48

Language 49
USB Flash Disk 50
Appendix A. Specifications 51

Chapter 1. Introduction

Congratulations on becoming a new user of **MSI Mega Stick**, the finely designed portable digital audio player. Your new **MSI Mega Stick** will improve the convenience of storing your personal data and the enjoyment of using various audio functions. We are proud to tell our users that **MSI Mega Stick** is thoroughly tested and backed by our reputation for unsurpassed dependability and customer satisfaction.

MSI Mega Stick is a high performance portable digital audio player that enables users to play MP3 or WMA audio files, listen in to the **FM** radio broadcast, and have favorable program recorded in **MSI Mega Stick**'s memory. In addition to the functions that just now mentioned, **MSI Mega Stick** also works as a portable USB data-storing device that enables users to store their personal data in the memory of **MSI Mega Stick**. Here are the five main distinguishing features of **MSI Mega Stick**:

- **Audio Player** –supports MP3 and WMA audio files.
- **FM Radio Broadcasting** – provides the function of receiving **FM** Radio frequency. Users are able to save ten **FM** station memory and have the **FM** program recorded while listening to the radio.
- **Voice or Radio Program Recording** – provides synchronous recording fuction for voice or **FM** radio program.
- **Language Learning Function** – enables users to listen to a particular limited playback repeatedly during normal playback. With this function, users will be able to pay more concentration on the repeated playback and to achieve the result of learning language.

- **USB Flash Disk** – allows users to store personal data in **MSI Mega Stick**'s memory.

Thank you for choosing **MSI Mega Stick**. We hope you will continue to turn to us for additional quality products as your personal needs and interests grow.

How to Use This Guide

This User's Guide provides instructions and illustrations on how to install and operate your **MSI Mega Stick**. We assume that those users whose operation system is Windows 98 or 98SE are familiar with their OS, and be capable to follow the step-by-step instructions to install the driver of **MSI Mega Stick**. If users who are not able manage the operation system properly, it is suggested to learn more about Microsoft Windows by referring to your Microsoft Windows manual before installing the provided driver.

Chapter 1, **Introduction**, tells you the descriptions of all the accessories of **MSI Mega Stick**. Please check out that if you have all the accessories included when you open the packing box. If any item is damaged or missing, please contact the vendor where you purchased **MSI Mega Stick** directly.

Chapter 2, **Getting Started**, introduces the function keys on the Drive, and tells you how to insert an AAA battery into the battery container located on the back of the Drive.

Chapter 3, **Driver and Utility Installation**, describes how to install the driver and the special designed utility for your new Mega Stick.

Chapter 4, **Basic Usage**, describes how to use your new Mega Stick USB Drive in a various way. It is recommended to read this chapter carefully before using this Mega Stick USB Drive.

Appendix A, Specification, provides the specification of this Mega Stick USB Drive.

Unpack[1]

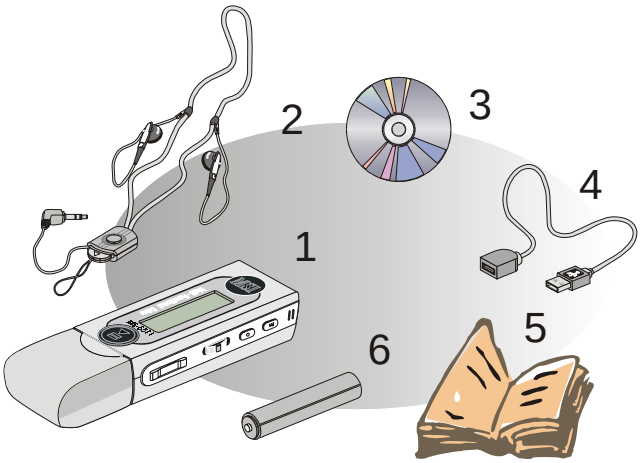

1. Portable Digital Audio Player
2. Earphone with Neck strap
3. Driver Disk
4. USB Cable
5. Quick Guide
6. AAA Battery

[1] The accessories that come with this USB/MP3 Drive package may be different from the one shown above.

Chapter 2. Getting Started

Function Keys

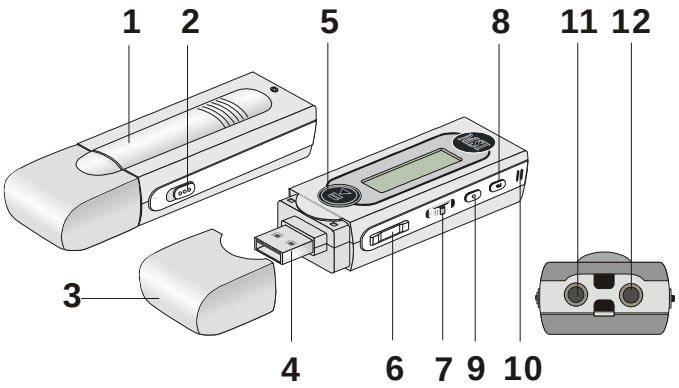

1.	Battery	Slide open to insert an AAA size battery here.
2.	Hold Switch	Switch to hold position to prevent any miss touching while this Mega Stick USB Drive is recording or playing.
3.	USB Connector Cap	Remove the cap when connecting the Mega Stick USB Drive to the computer.
4.	USB Connector	Connect one end of the supplied USB cable here.
5.	Play/Pause	In music playback mode, press to play or pause the playback; in FM mode, press to select the stored favorite stations one by one.
6.	Volume+/-	Press +/- button to increase or decrease the volume level.

7.	MENU	Press down the button or push it to the right or to the left to make various adjustment.
8.	Fn	Press to select FM station mode.
9.	REC	Press to start or stop the FM or voice recording.
10.	MIC	Microphone
11.	Earphone jack	Plug the supplied earphone here.
12.	MIC	Plug the microphone here.

LCD Display

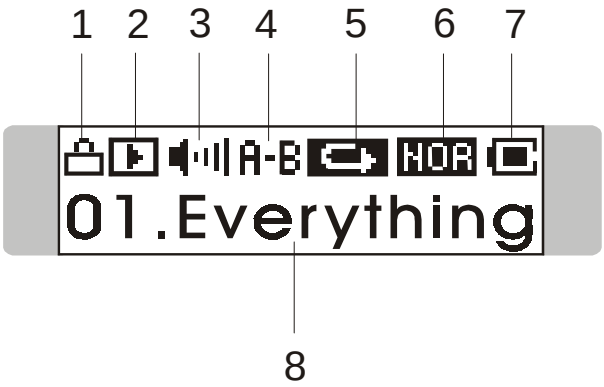

1.	Hold (Lock) Switch	Indicates when the Hold function is enabled.
2.	Playback Status	Displays the music or voice files playback status.
3.	Volume	Displays the volume status.
4.	A to B Repeat	Indicates when A to B Repeat function is enabled.
5.	Repeat Mode	Indicates play mode that includes Normal, Repeat One, Repeat All, Shuffle, and Shuffle

		Repeat.
6.	Equalizer	Indicates the EQ mode settings, which include Normal, Classical, POP, Rock, and Jazz.
7.	Battery Status	Indicates the Battery Status.
8.	Playing File Name	Displays the current file name that is being played.

Insert a Battery

1. Remove the USB connector cap
2. Slide open the battery cover.

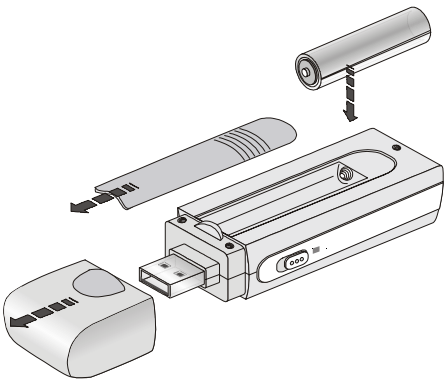

3. Insert an AAA battery and make sure the battery is inserted into the correct alignment.
4. Slide back the battery cover.
5. Press the **Play/Pause** 「 ▶ II 」 button to check the capacity of the battery.

6. If you cannot read the Battery Status on the Display when the battery is inserted, please return to step 1 and once again make sure the battery is inserted into the correct alignment.

Battery Consuming Reference

Category of Battery	Recording	Playing
AAA Alkaline 1280mA/hr battery	Min. 12 hours for voice or FM radio recording	Min. 12 hours for audio playback

Note: 1. Alkaline battery is recommended when using this Drive.

2. Make sure the battery is taken out if you are not going to use this Drive for a long period of time.

Hold Switch

This Mega Stick USB Drive provides a Hold Switch, which is located on the side of the Drive for preventing any miss touching while the Drive is recording or playing. Once the hold switch is slide to the lock position, all function keys on the Drive will be disabled instantly.

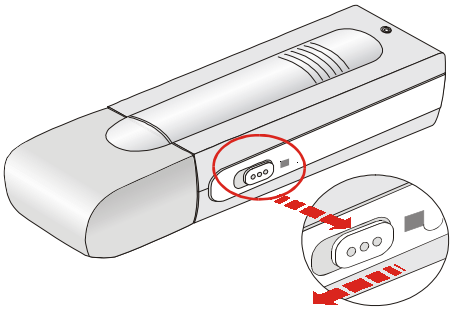

Chapter 3. Driver & Utility Installation

Connecting the Mega Stick to Your Computer

1. Remove the USB connector cap.

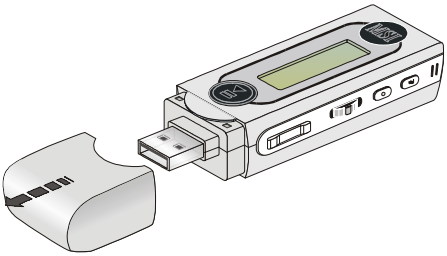

2. Plug one end of the supplied USB cable to your computer, and plug the other end to the Mega Stick USB Drive.

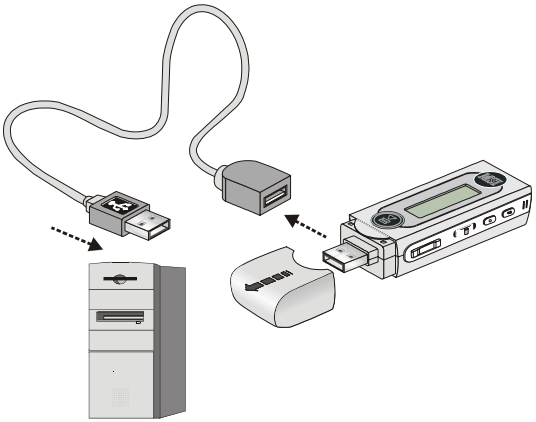

3. Once the Mega Stick USB Drive is connected to the computer, the Mega Stick USB Drive should be detected by the operation system automatically.
   Note: *If the operation system of your computer is Windows 98 or 98SE, a hardware driver for the Mega Stick USB Drive will be required.*

Hardware Installation for Windows 98SE only

For Windows 98SE operation system, it will automatically detect the new hardware when the Mega Stick USB Drive is first connected to your computer. Please follow the following instructions to install the driver for this Mega Stick USB Drive.

1. Click **Next** to continue.

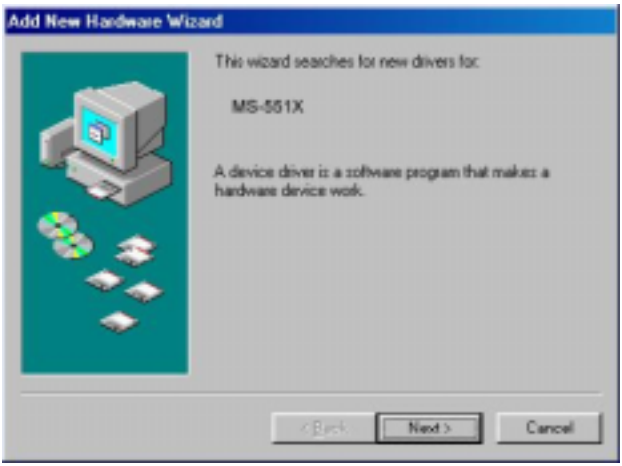
Add New Hardware Wizard
This wizard searches for new drivers for:
MS-551X
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel

2. Select **Search for the best driver for your device** to continue.

Add New Hardware Wizard
What do you want Windows to do?
Search for the best driver for your device. (Recommended).
Display a list of all the drivers in a specific location, so you can select the driver you want.
< Back
Next >
Cancel

3. Insert the provided disk, and select **CD-ROM** to continue.

Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
CD-ROM drive
Specify a location:
< Back
Next >
Cancel

4. Click **Next** to continue.

Add New Hardware Wizard
Windows driver file search for the device:
MSI MS-551X MEGA STICK
Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue.
Location of driver:
D:\MSI\DRIVERS\MS551XU.INF
< Back
Next >
Cancel

5. Click **Finish**, and the driver is installed successful.

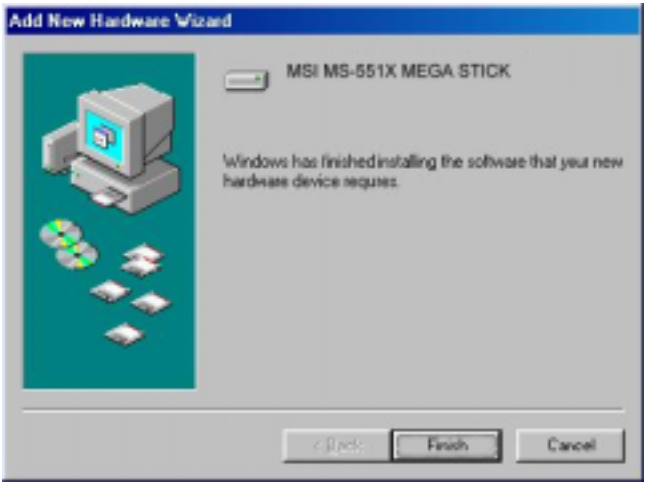
Add New Hardware Wizard
MSI MS-551X MEGA STICK
Windows has finished installing the software that your new hardware device requires.
< Back
Finish
Cancel

Utility Installation

MSI Mega Stick provides a useful utility for upgrading the latest firmware provided by MSI via Internet. To install this utility, simply insert the supplied disk into the computer, and then follow the on-screen instructions.

1. Click **Next** to continue.

2. Click **Yes** to continue.

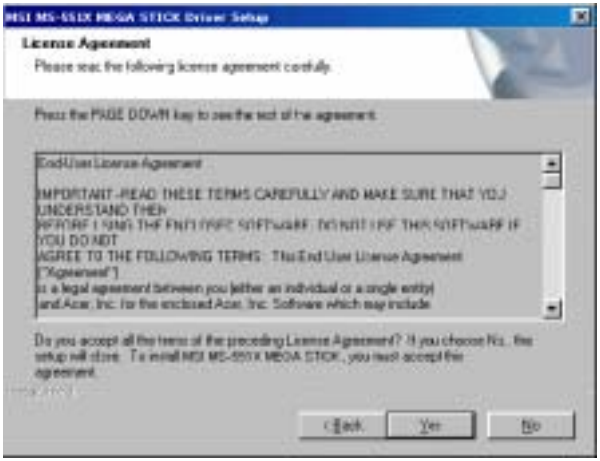

3. Click **Next** to continue.

MSI MS-551X MEGA STICK Driver Setup
Choose Destination Location
Select folder where Setup will install files.
Setup will install MSI MS-551X MEGA STICK in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\MSI\MS-551X
Browse...
InstallShield
< Back
Next >
Cancel

4. Click **Next** to continue.

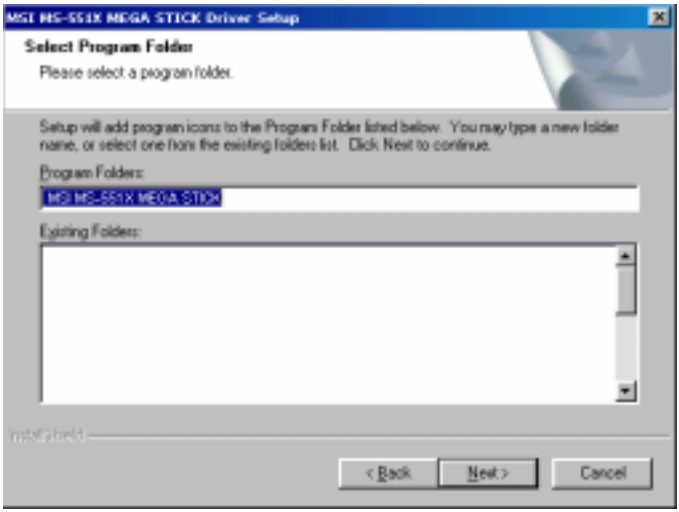
MSI MS-551X MEGA STICK Driver Setup
Select Program Folder
Please select a program folder.
Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.
Program Folders:
MSI MS-551X MEGA STICK
Existing Folders:
InstallShield
< Back
Next >
Cancel

5. Installation is on going.

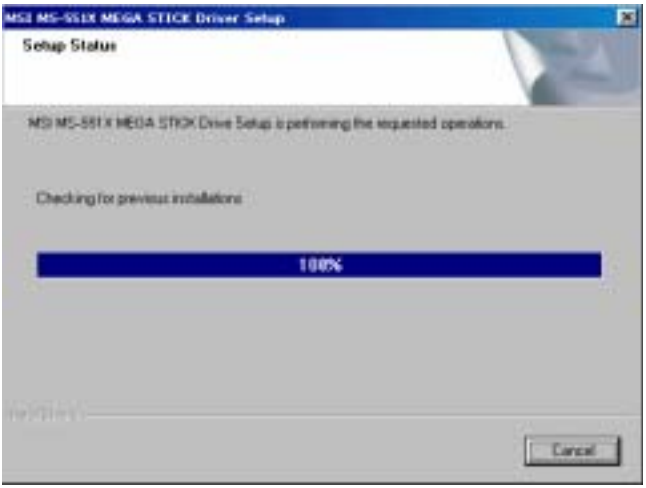
MSI MS-551X MEGA STICK Driver Setup
Setup Status
MSI MS-551X MEGA STICK Drive Setup is performing the requested operations.
Checking for previous installations
100%
Cancel

6. Click **Finish** to continue.

MSI MS-551X MEGA STICK Driver Setup
InstallShield Wizard Complete
Setup has finished installing MSI MS-551X MEGA STICK on your computer.
Finish

7. Select **Yes, I want to restart my computer now**.

Using the Utility

Once the Utility is installed, you will be able to updating a new firmware or format your Mega Stick with this Utility.

Firmware Updating

To update the firmware, download the latest firmware from MSI website first, and place the downloaded firmware under [Program files -> MSI -> MS-551X]. Now, follow the instructions below to update the new firmware:

1. Press and hold the Play/Pause button.
2. Connect the Mega Stick USB Drive to your computer with the supplied USB cable.

   Note: *The Play/Pause button must be pressed while connecting the Mega Stick USB Drive to the computer.*
3. When you have connected the Mega Stick USB Drive to the computer,

please go to [Device Manager] and find a new drive named [Player Recovery Device Class] to check out that if the connection is working properly. If the connection is failed, you will not find [Player Recovery Device Class] appearing under [Device Manager]. At this time, please repeat step 1 and 2 again to try to connect the Mega Stick USB Drive to your computer one more time.

4. Now, release the Play/Pause Button.
5. Run the Update program by selecting [Start -> Programs -> MSI -> MS-551X] to load the firmware.

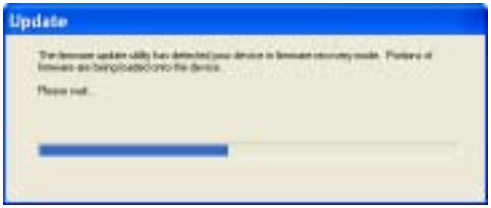

6. After loading firmware, you can see an update dialog.

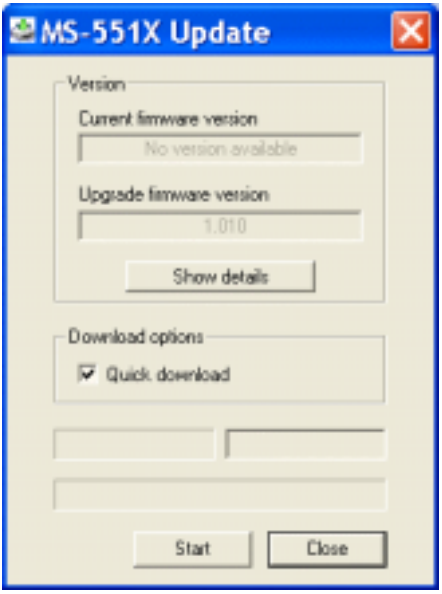

7. Decide the Download options: Select Quick download to update the new firmware without formatting the Mega Stick. Deselect Quick download to update the new firmware and format the Mega Stick at the same time.
8. Press Start button to start updating the new firmware.

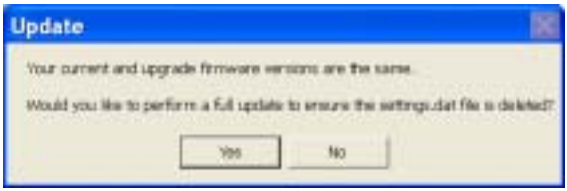
Update
Your current and upgrade firmware versions are the same.
Would you like to perform a full update to ensure the settings.dat file is deleted?
Yes
No

Formatting the Mega Stick

To format the Mega Stick, please refer the connecting instruction mentioned previously to connect the Mega Stick to your computer first.

1. Run the Update program by selecting [Start -> Programs -> MSI ->

MS-551X] to load the firmware.

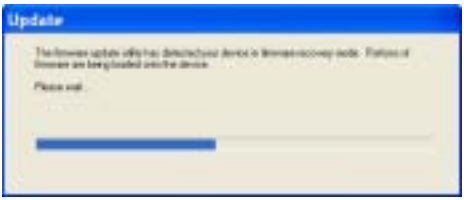

2. After loading firmware, you can see a format dialog.

3. Press Start button to start formatting the Mega Stick.

Chapter 4. Basic Usage

Power On and Off

1. Press the **Play/Pause** 「 ▶ II 」 button once to turn the power on.

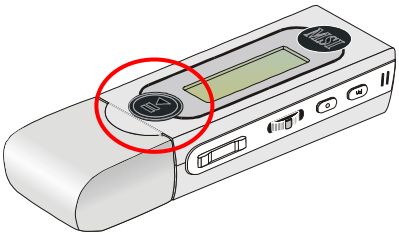

2. To power off the USB Device, press and hold the **Play/Pause** 「 ▶ II 」 button until the power is switched off. While you are long pressing the **Play/Pause** 「 ▶ II 」 button to power off the Mega Stick USB Drive, you will see a **Power Off Status Bar** appearing on the Display to show you the Power Off status, and note that it takes about three to five seconds to turn the power off.

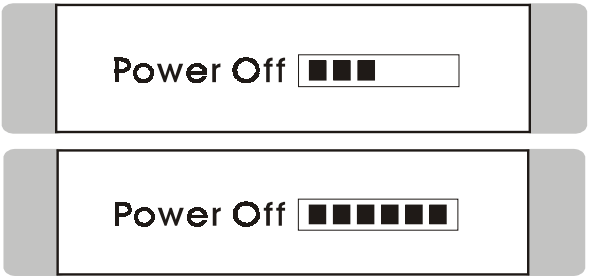

Editing Sound Tracks (Files)

1. Press the **Play/Pause** 「 ▶ II 」 button to power on the Mega Stick USB Drive. If there is no sound track added in the memory of this drive, you will read the massage as below on the screen.

2. Remove the USB connector cap, and then plug one end of the supplied USB cable to your computer, and plug the other end to the Mega Stick USB Drive.
3. Once the Mega Stick USB Drive is connected to the computer, you will see the screen shown as below.

4. Go to **Start ➔ Program ➔Windows Explore ➔USB/MP3 Drive**.
5. Select the desired sound tracks (files) from your own folder, and move them into the Mega Stick USB Drive. While the selected sound tracks (files) is transferring to the Mega Stick USB Drive, a message will shown as below.

Note: *Do not disconnect the Mega Stick USB Drive from the computer while the file transferring is still on going, otherwise it may cause some system failure.*

6. Under the USB/MP3 Drive, you are allowed to add, delete, or edit a folder as what you will do under a disk as usual. In another word, this Mega Stick USB Drive works as another portable hard disk of yours.

Music Playback

Normal Playback

1. Press the **Play/Pause** 「 ▶ II 」 button to play the current selected file.
2. During playback, press the **Play/Pause** 「 ▶ II 」 button again to pause the playback.

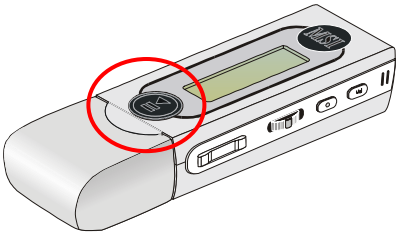

Select the Next or Previous Track (File)

1. During playback, push the **Menu** button to the right once to skip to the next track.

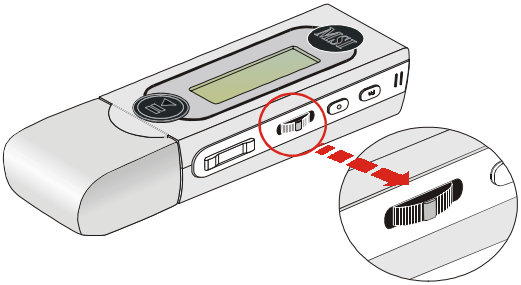

2. Or, push the **Menu** button to the left once to skip back to the previous track.

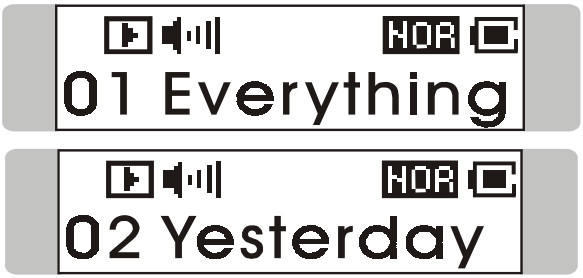

Fast-Forward or Rewind

1. During playback, push the **Menu** button to the right and hold the position to fast-forward the current track.
2. Or, push the **Menu** button to the left and hold the position to rewind the current track.

Volume Adjusting

1. Press the **Volume Up** or **Down** button to adjust the playback volume up or down.
2. You may check the LCD Display to see the Volume status.

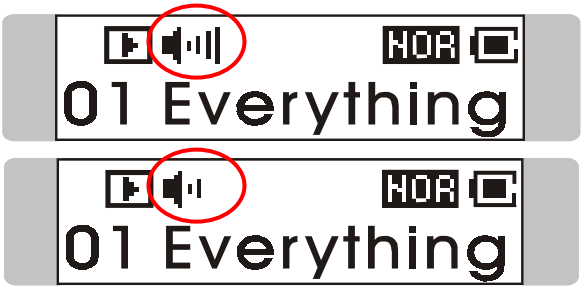

Delete a Track (File)

1. Press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of DELETE FILE appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to select DEL MUSIC.

3. All of the stored file will be displayed by sequence, switch the **Menu** button to the right or to the left to select Yes to delete the file shown on the Display, or select No to skip to the next file, or select EXIT to leave the current screen.

Delete All Tracks (Files)

1. Press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of DELETE FILE appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to the right twice to select DEL ALL MUSIC.

3. Once you read DEL ALL MUSIC on the screen, press down the **Menu** button, and then select **Y** to delete all music files. Note that it may take several seconds to delete all the files.

EQ Settings

While you are listening to the music, you are allowed to choose a desired EQ mode to meet your personal need or habit.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button once and you should read the message of EQ appearing on the Display.

3. Press down the **Menu** button once, and switch the **Menu** button to the right or to the left to choose the EQ mode between NORMAL, ROCK, JAZZ, CLASSICAL, and POP. The default EQ setting is NORMAL mode.
4. Once a particular EQ mode is selected, the indicator for each different EQ mode will appear on the top of the Display.

Repeat Settings

While you are playing music or voice files, you are allowed to select a desired playback setting from NORMAL, REPEAT ONE, REPEAT ALL, SHUFFLE, and SHUFFLE REP.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button once and you should read the message of REPEAT appearing on the Display.

3. Press down the **Menu** button once, and switch the **Menu** button to the right or to the left to choose NORMAL, REPEAT ONE, REPEAT ALL, SHUFFLE, or SHUFFLE REP.

FM Radio Mode

Select FM Radio Mode

1. Press and hold the **Fn** button located on the side of the Mega Stick USB Drive for one second to select FM Mode.

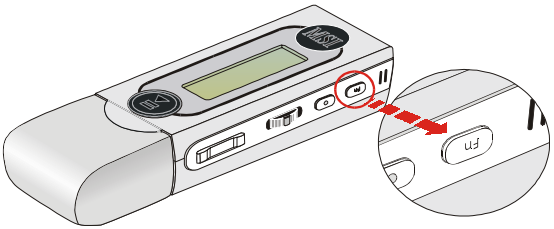

2. Or, you can press down the **Menu** button once, and then push the **Menu** button to the right twice.

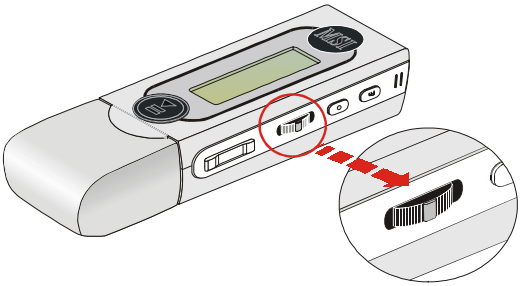

3. If you read the message of FM RADIO appearing on the Display, press

down the **Menu** button once to select FM Radio Mode.

4. If you do not read the message of FM RADIO on the Display, please keep pushing the **Menu** button the to right until FM RADIO appears.

Select FM Station

1. Once the FM Radio Mode is selected, use the **Menu** button by pushing it to the right or to the left to select the desired station.
2. While you are searching for the desired station, you will read the frequency appearing on the Display.

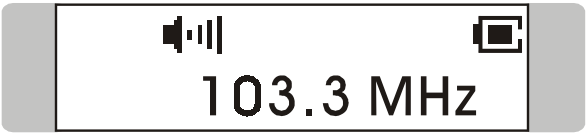

Storing a Favorite Station

With this favorite station memory function, you will be able to store 10 favorite stations named from P01 to P10 into the memory of this Mega Stick USB Drive.

1. To store a favorite Station, select a desired frequency first.

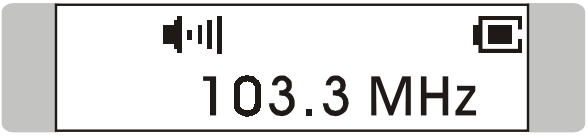

2. Press the **Menu** button once, and you should read the massage of SAVE TO P01 appears on the Display.

3. Switch the **Menu** button to the right or to the left to select a desired favorite station number.

4. Now, press the **Menu** button again to save the selected frequency to the selected favorite station number.

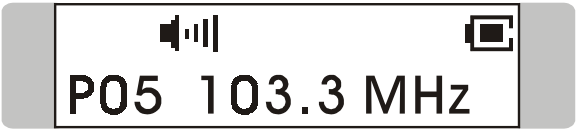

5. To set another favorite station, repeat step 1 to 4.

Selecting the Stored Favorite Station

1. To select the stored favorite station, press the 「▸II」 button repeatedly.
2. Once the desired stored favorite station appears on the Display, release the 「▸II」 button.

Recording Radio Broadcast

1. Select a desired station frequency.

2. Press and hold the **Play/Pause** 「▸II」 button located next to the **Fn** button for 2 seconds, and then release the **REC**「●」button.

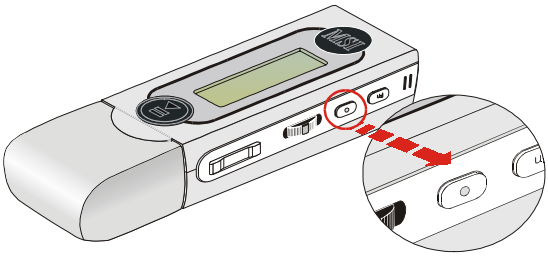

3. Once the **REC**「●」button is long pressed and then released, the selected station frequency will now start being recorded. On the Display, users should read that a recording FM file is generated and place under the folder of [**/VOICE/**]. The recording file name sequence starts from [**F001.WAV**], and then [**F002.WAV**], and so forth.

4. To stop recording, press the **REC**「●」button or the **Menu** button again.
5. The maximum length of the recording depends on how much available memory space is left while recording.

Play a Recorded FM Voice File

1. To play a recorded FM voice file, press down the **Menu** button once, and then push the **Menu** button to the right once, and now you should read the message of VOICE appearing on the Display.

2. Press down the **Menu** button again, and then use the **Menu** button to select a desired recorded FM voice file by pushing the **Menu** button to the right or

to the left.

3. Once the desired voice file is selected, press the 「▶ II 」button to start playing the file.
4. Note that while you are searching for the desired recorded voice file, all the recorded FM voice files will be displayed by sequence.

Delete a Recorded FM Voice File

1. To delete a recorded FM voice File, press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of DELETE FILE appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to the right to select DEL VOICE.

3. All of the recorded FM voice file will be displayed by sequence. Switch the **Menu** button to the right or to the left to select **Y** to erase the file shown on the Display, or select **N** to skip to the next file, or select EXIT to leave the current screen.

Delete All FM Voice Files

1. Press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of DELETE FILE appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to the right twice to select DEL ALL VOICE.

3. Once you read DEL ALL VOICE on the screen, press down the **Menu** button, and then select **Y** to delete all FM voice files. Note that it may take several seconds to delete all the files.

Switch between Music Playback or FM mode

Switch from Music Playback mode to FM mode

Press and hold the **Fn** button located on the side of the Mega Stick USB Drive for one second to select FM Mode.

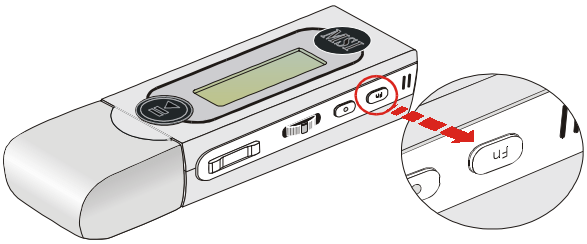

Switch from FM mode to Music Playback mode

Press and hold the **Menu** button located on the side of the Mega Stick USB Drive for few seconds, and then release the **Menu** button.

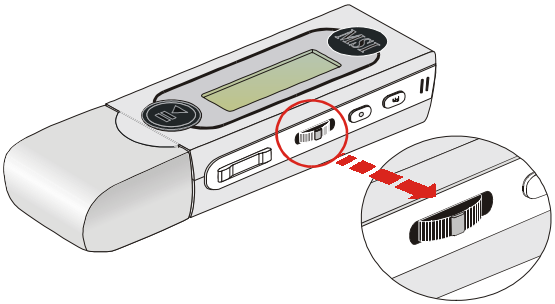

Voice Recording

This Mega Stick USB Drive also works as a synchronizing recorder. You can use it to record your own voice, an interview or a speech, and so on. To do the voice Recording, please follow the steps shown below.

Voice Recording

This Mega Stick USB Drive provides two methods to proceed voice recording, follow the instruction below to learn these two methods.

Method I

1. Press the **REC**「●」button located next to the **Fn** button to start voice recording function.

2. On the Display, a recording file should be generated and placed under the folder of [**/VOICE/**]. The recording file name sequence starts from [**V001.WAV**], and then [**V002.WAV**], and so forth.

3. To stop recording, simply press down the **REC**「●」button again, and you will see the status return to the previous status.

Method II

4. Press down the **Menu** button once, and then push the **Menu** button to the left twice.
5. If you read the message of **RECORD** appearing on the Display, press down the **Menu** button again to start recording.

6. On the Display, users now should read that a recording file is generated and place under the folder of [**/VOICE/**]. The recording file name sequence starts from [**V001.WAV**], and then [**V002.WAV**], and so forth.

7. To stop recording, simply press down the **Menu** button or the **REC**「●」button again, and you will see the message on the screen return to the previous status.

8. To exit the RECORD mode, push the **Menu** button to the right once to Exit, and then press the **Menu** button once.

Play a Recorded Voice File

1. To play a recorded voice file, press down the **Menu** button once, and then push the **Menu** button to the right once, and now you should read the message of VOICE appearing on the Display.

2. Press down the **Menu** button again, and then use the **Menu** button to select a desired recorded voice file by pushing the **Menu** button to the right or to the left.

3. Once the desired voice file is selected, press the 「▶ II 」button to start playing the file.
4. Note that while you are searching for the desired recorded voice file, all the recorded voice files will be displayed by sequence.

Delete a Recorded Voice File

1. To delete a recorded voice File, press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of **DELETE FILE** appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to the right to select DEL VOICE.

3. All of the recorded file will be displayed by sequence. Switch the **Menu** button to the right or to the left to select **Y** to erase the file shown on the Display, or select **N** to skip to the next file, or select EXIT to leave the current screen.

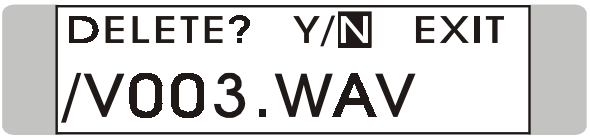

Delete All Voice Files

1. Press down the **Menu** button once, and then push the **Menu** button to the right four times, and now you should read the message of DELETE FILE appearing on the Display.

2. Press down the **Menu** button once and then push the **Menu** button to the right twice to select DEL ALL VOICE.

3. Once you read DEL ALL VOICE on the screen, press down the **Menu** button, and then select **Y** to delete all voice files. Note that it may take several seconds to delete all the files.

Language Learning Function

This Mega Stick USB Drive enables users to listen to a particular limited playback repeatedly during normal playback. With this function, users will be able to pay more concentration on the repeated playback and to achieve the result of learning language. To use this function, follow the instruction below:

1. During normal playback, find the starting point of the repeating playback that you wish to set, and press the **FM** button once.
2. When you first press the **Fn** button, you will see the indication of **A-** appearing on the screen.

3. Then, find the terminal point of the repeating playback that you wish to set, and press the **Fn** button again.
4. When you press the **Fn** button the second time, you will see the indication

of **A-B** appearing on the screen, and that means you have set the repeating playback successfully.

5. Once the indication of **A-B** appears on the screen, you will now hear the repeating playback that you set previously again and again.
6. To cancel the repeating playback and return to the normal playback, press the **Fn** button again, and the indication of **A-B** will disappear from the Display.

Operation Menus

This Mega Stick USB Drive provides a **Menu** switching button that includes most function designed for **MSI Mega Stick**. With this **Menu** switching button, in addition to switch between Music Playback, FM Radio or Recording mode, EQ setting or any other setting for the Mega Stick USB Drive can be also adjusted quickly and easily.

Operation Menus		
MUSIC		
VOICE		File names
FM RADIO		
SETTINGS	EQ	NORMAL / ROCK / JAZZ / CLASSICAL / POP
	REPEAT	NORMAL / REPEAT ONE / REPEAT ALL / SHUFFLE / SHUFFLE REP

	BACKLIGHT	DISABLE / 2 SECS / 5 SECS / 10SECS / 30 SECS
	CONTRAST	Adjusting bar
	POWER OFF	DISABLE / 1 MIN / 2 MINS / 5 MINS / 10 MINS
	RECORD RATE	8000Hz / 11025Hz / 16000Hz / 22050Hz / 32000Hz / 44100Hz / 48000Hz
	LANGUAGE	TRAD. CHINESE / ENGLISH
DELETE FILE	DEL MUSIC	Delete a Music file each time (.mps / .wav)
	DEL VOICE	Delete a Voice or FM radio recording file each time (.wav)
	DEL ALL MUSIC	Delete all Music file
	DEL ALL VOICE	Delete all Voice or FM radio recording files
	EXIT	
ABOUT		
RECORD		
EXIT		

1. Press down the **Menu** button once, and then push the **Menu** button to the right or to the left to select the desired function.
2. Select **MUSIC** by pressing down the **Menu** button once to enter music playback mode.

3. Select **VOICE** by pressing down the **Menu** button and press the **Menu** button the right once to enter voice playback mode.

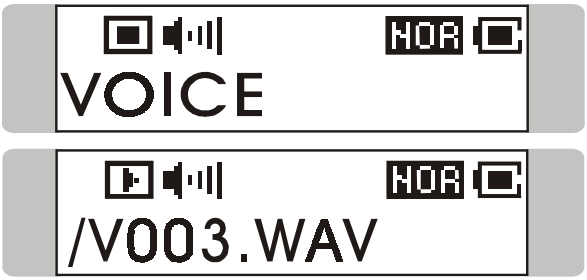

4. Select **FM RADIO** by pressing down the **Menu** button to enter **FM** radio broadcasting mode.

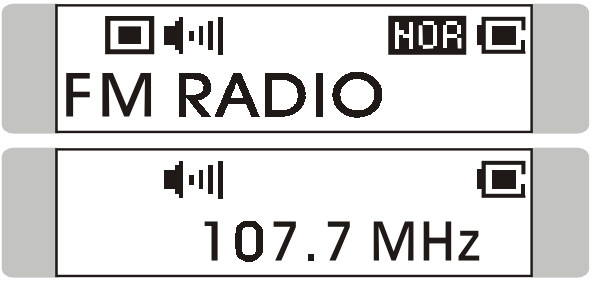

5. Select **SETTINGS** by pressing down the **Menu** button to enter Setting mode. In Setting mode, you are able to make adjustment for various functions.

Note: *Adjustment for all items under the menu of settings can be made during music playback or when music playback is stopped.*

6. Select DELETE FILE by pressing down the **Menu** button to delete music or voice files.

7. Select ABOUT to read the information of this **MSI Mega Stick.**

8. Select RECORD to start recording through MIC or FM radio station.

9. Select EXIT to return to Music Playback mode.

Other Settings

Backlight

Under this Backlight setting, you are able to set a time to turn off the backlight

of the LCD Display automatically.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button again, and then push the **Menu** button to the right twice to select BACKLIGHT. Once the massage of BACKLIGHT appears on the screen, press down the **Menu** button again.

3. Now push the **Menu** button to the right or to the left to select a desired time to turn off the backlight of the LCD Display. If select DISABLE, and the backlight of the LCD Display will be disabled.

4. When a selection is decided, press down the **Menu** button once to confirm the selection.

Note: Backlight setting will not be functioning as you set when the Hold Switch of this Mega Stick is switched to LOCK position, and when this Mega Stick is in recording mode.

Contrast

Under this Contrast setting, you are able to set the contrast of the LCD Display. Under this Backlight setting, you are able to set a time to turn off the backlight of the LCD Display automatically.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button again, and then push the **Menu** button to the right three times to select CONTRAST. Once the massage of CONTRAST appears on the screen, press down the **Menu** button again.

3. Now push the **Menu** button to the right or to the left to increase or decrease the Contrast value.

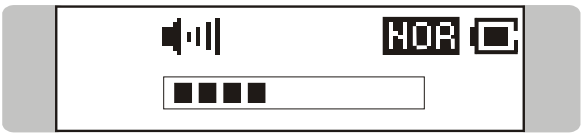

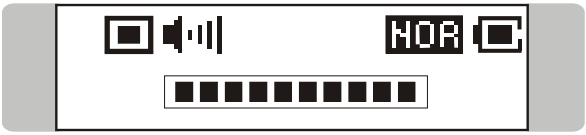

4. When a selection is decided, press down the **Menu** button once to confirm the selection.

Power Off

Under this Power Off setting, you are able to set a time to turn off this Mega Stick USB Drive automatically.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button again, and then push the **Menu** button to the right four times to select POWER OFF. Once the massage of POWER OFF appears on the screen, press down the **Menu** button again.

3. Now push the **Menu** button to the right or to the left to select a desired time to turn off this Mega Stick USB Drive. If select DISABLE, and the power of this Mega Stick USB Drive will always stay on.

4. When a selection is decided, press down the **Menu** button once to confirm the selection.

Record Rate

Under this Record Rate setting, you are able to set the Record Rate as your wish.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button again, and then push the **Menu** button to the left three times to select RECORD RATE. Once the massage of RECORD RATE appears on the screen, press down the **Menu** button again.

3. Now push the **Menu** button to the right or to the left to select a proper Record Rate.

4. When a selection is decided, press down the **Menu** button once to confirm the selection.

Language

Under this Language setting, you are able to select the language of the interface as your wish.

1. Press down the **Menu** button once, and then push the **Menu** button to the right three times, and now you should read the message of SETTINGS appearing on the Display.

2. Press down the **Menu** button again, and then push the **Menu** button to the left twice to select LANGUAGE. Once the massage of LANGUAGE appears on the screen, press down the **Menu** button again.

3. Now push the **Menu** button to the right or to the left to select a desired

language.

4. When a selection is decided, press down the **Menu** button once to confirm the selection.

USB Flash Disk

This Mega Stick USB Drive enables users to save personal data (files) in various formats to its memory. If you like, you can say that this Mega Stick USB Drive works as another hard disk, but a portable, small and exquisite one. To save data into the memory of this Mega Stick USB Drive, simply connect it to your computer, and use **Windows Explorer** to manage your data.

Note: *Please use the supplied Driver Dick to format this Mega Stick USB Drive in order to ensure the formatting quality. If you use windows formatter to format this Mega Stick USB Drive, unexpected error may occur."*

Appendix A. Specifications

MSI Mega Stick 1 5 in 1 Multi-Functional Drive	
Target Dimension	95.7 (W) x 31(D) x 18.9(H) mm
Target Weight	29 g without battery , 40g with battery
Operation Temperature	0 °C ~ 45°C
Storage Temperature	-20°C ~ +70 °C
Audio Spec	Output: 60mW rms (30mW / channel) Frequency: 20 to 20K Hz SNR: >90dB
LCD module	Dimension: 29.5(L) x 11(W)mm (96 x 25 pixels)
Memory Size	128 MB
I/O Input	1. Stereo Audio- out, 3.5mm 2. Mono MIC - in, 3.5mm 3. USB connector
EMI and Safety	BSMI, FCC, CB, CE, VCCI
Interface Language	Traditional / Simplified Chinese, English
Earphone with neck strap	Stereo Output: 20mW rms (10mW / Channel)
Battery	AAA-Alkaline Battery
Manual	English, Traditional Chinese
USB Cable	Length: 100 cm